


## QUICK REFERENCE GUIDE

# AGBARA OLUWA



## OPERATION MANUAL

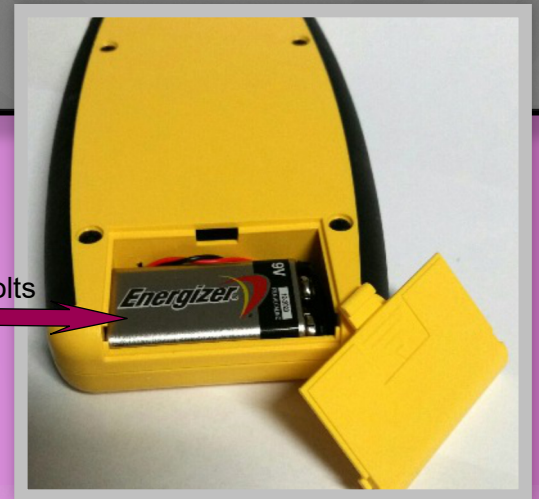

Device operates on 9 volts battery.




Speaker

Power Switch

Volume Control

Carefully pry open the battery compartment, by pushing down and slide open the cover To change or replace the battery.

**USE CAUTION !**

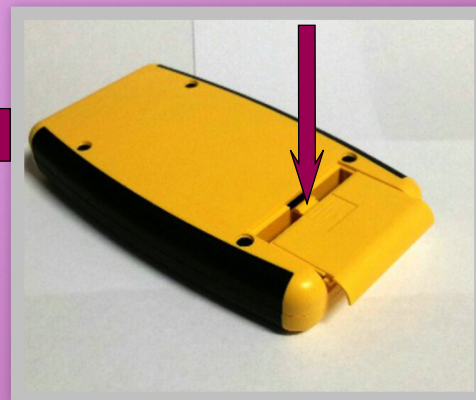

## KEY INFORMATION

Thank you for purchasing our product!  
You will enjoy the fun brought to you and your children by learning Yoruba language with our products.

Please do read this guide thoroughly for better use of this product.

Anyone or any party is not allowed to copy all or any parts of our products. Copycats will be prosecuted.

If you have a question or experience a problem with our product or any of our products, please get in touch with us through our email [yorubalingua@gmail.com](mailto:yorubalingua@gmail.com).

# NO SERVICEABLE PARTS INSIDE

## HINTS:

- To ensure that the product can be used normally, the battery should be connected when the power switch is turned off.
- Please turn off the product if not in use for long time.
- Excessive force or aggressive handling of the battery change can break the battery wire.
- Water must not come in contact with our device. Like any electronics device water will damage electronics parts and components.
- Do not drop the device on a hard surface from a height of more than six inches.
- Any sign of abuse on the device will cancel your 3 months warranty.



## TERMS ON 3 MONTHS WARRANTY:

We are not responsible for any damage from nature or act of God. Physical damage, reckless and careless use and abuse to the product will not qualify for the 3 months warranty. Please avoid use the device in the rain as damage will not be covered. Failure or damage caused by attempt to repair the device yourself is not acceptable for warranty.

## COMMON PROBLEMS AND TROUBLESHOOTING WITH RECOMMENDED USE.

1. **If the message from the speaker is no longer coherent, muffled or sound rather abnormal. Or if at the touch of a button, the message keep repeating itself abnormally:-**
  - Please change the battery.
  - There is no serviceable part inside. The components are semiconductors and are guaranteed to work for 110 years. Your device can only damage through physical abuse and short-circuit through water, rain and fire contact.

For any questions, please contact us through email [yorubalingua@gmail.com](mailto:yorubalingua@gmail.com)

**THANK YOU FOR BUYING THIS DEVICE**

**We Come In Peace!**